

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not work.	Switch not pressed. Plug not inserted. Power cut.	Press the switch. Insert the plug into the socket. Check the power line.
Suction is not satisfactory.	Accessories or tubes clogged. Suction nozzle squeegee worn or damaged.	Check and clean the flexible hose and the suction nozzle. Check and replace the squeegee.
Detergent dispensing not even.	Nozzle clogged. Filter clogged.	Clean nozzle. Clean suction filter.
Detergent dispensing not working.	Switch not pressed. Thermal protection enabled.	Press the switch. Wait approx. 30 second for automatic reset.